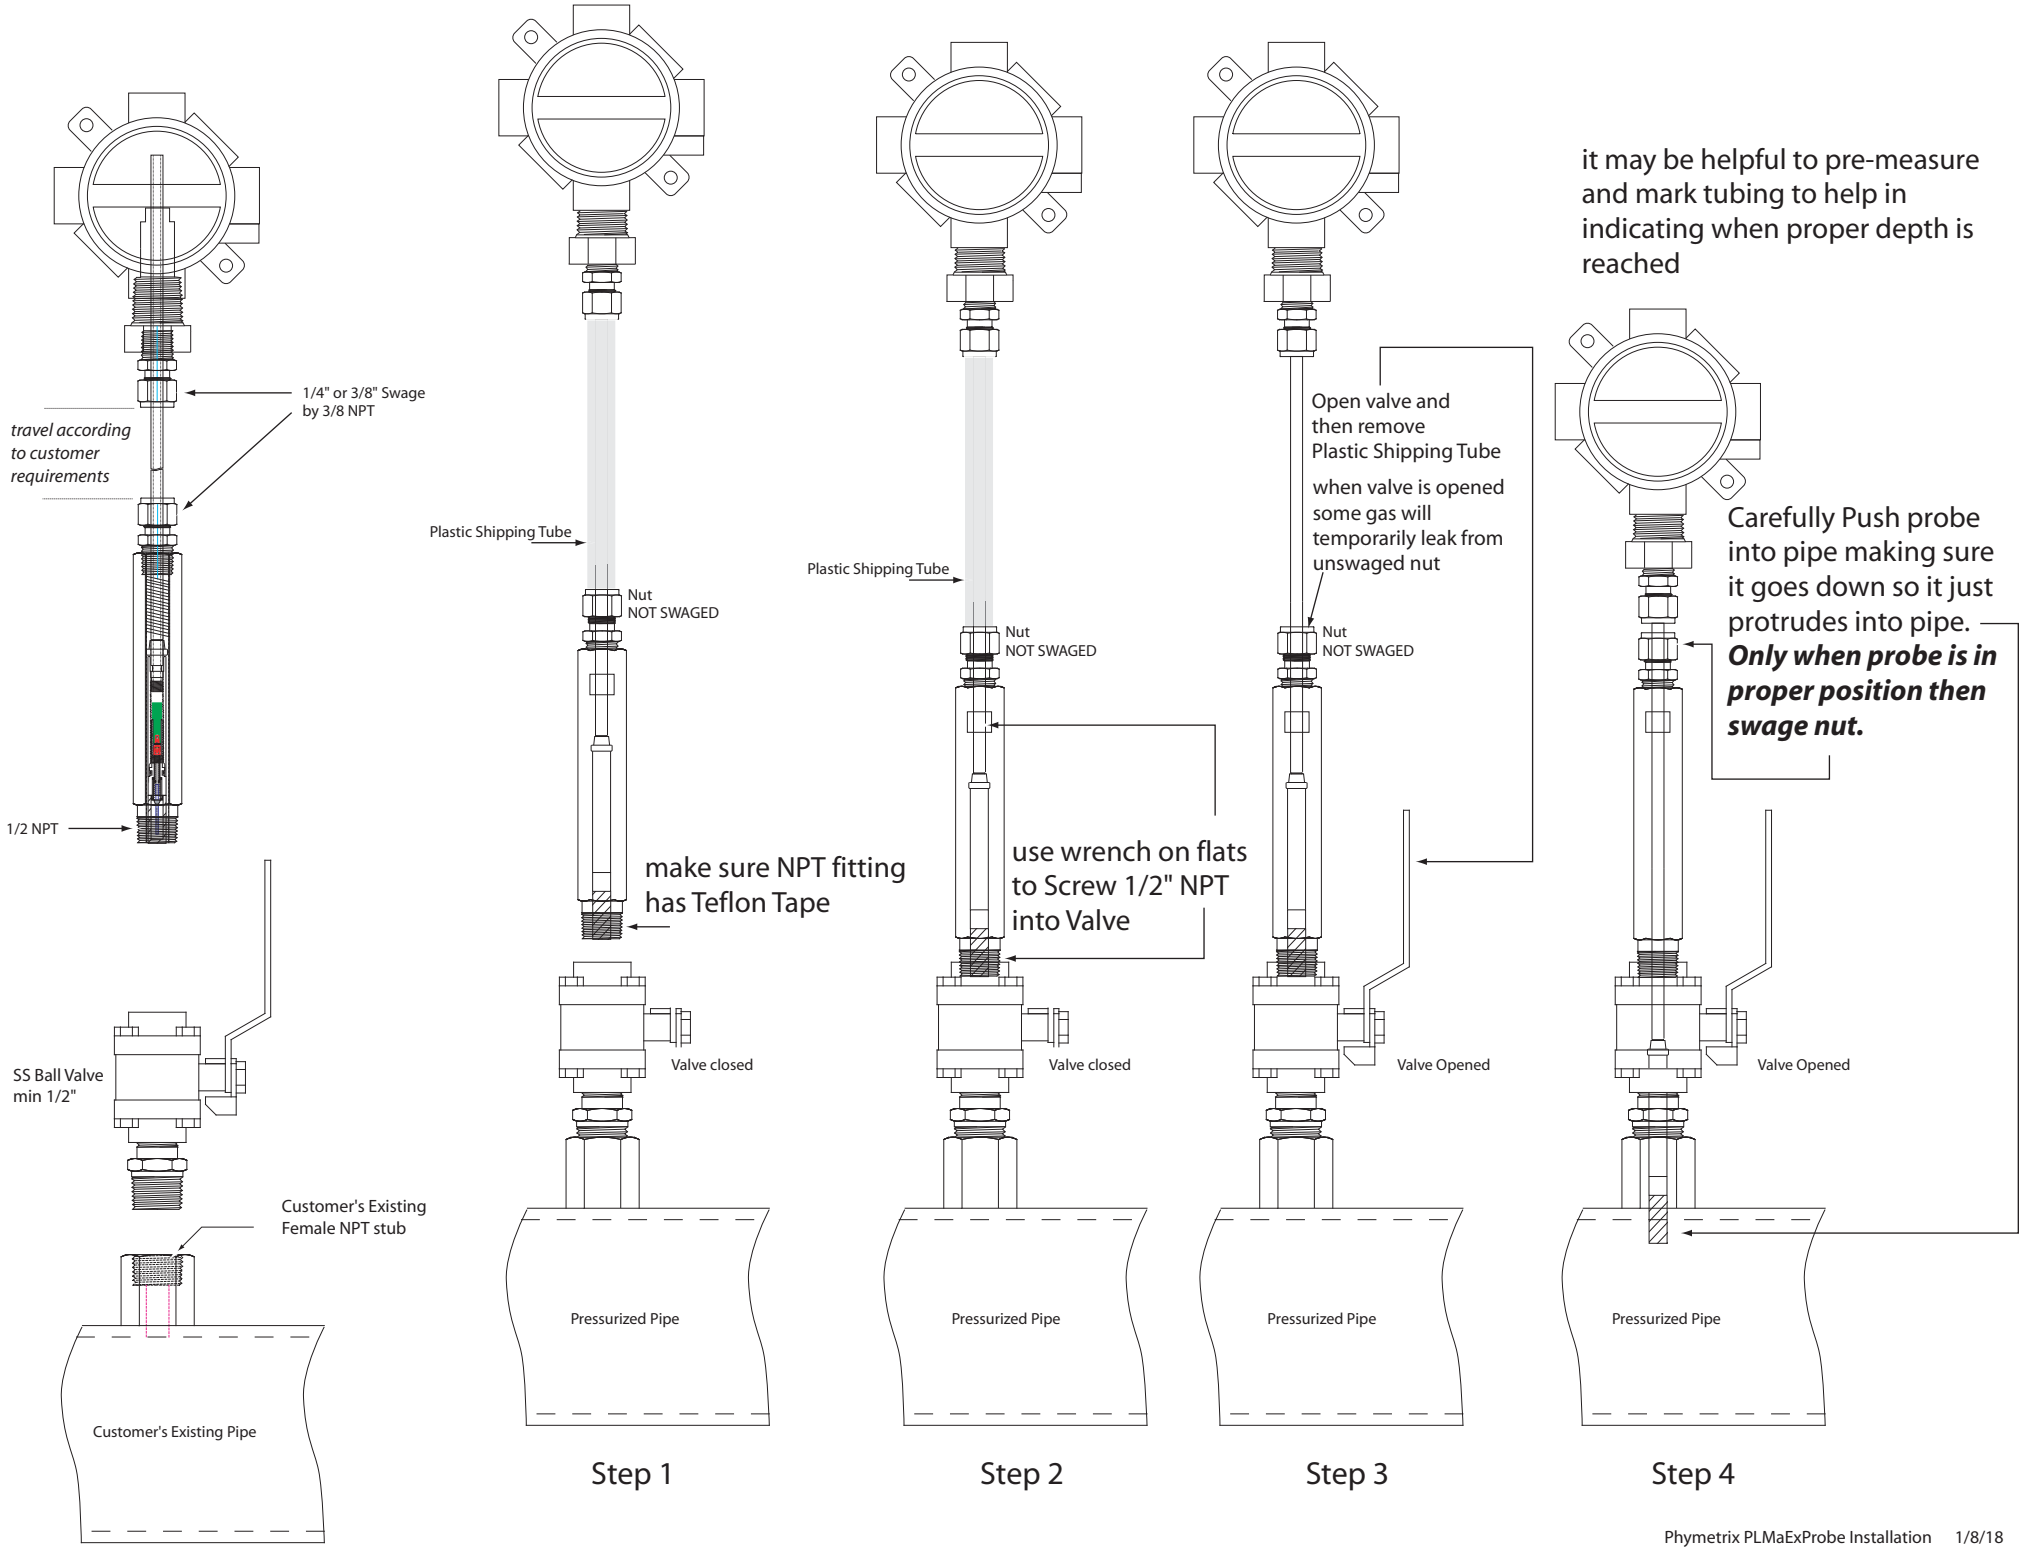
1/4" or 3/8" Swage by 3/8 NPT
travel according to customer requirements
1/2 NPT
SS Ball Valve min 1/2"
Customer's Existing Female NPT stub
Customer's Existing Pipe
Plastic Shipping Tube
Nut NOT SWAGED
make sure NPT fitting has Teflon Tape
Valve closed
Pressurized Pipe
Step 1
Plastic Shipping Tube
Nut NOT SWAGED
use wrench on flats to Screw 1/2" NPT into Valve
Valve closed
Pressurized Pipe
Step 2
Open valve and then remove Plastic Shipping Tube
when valve is opened some gas will temporarily leak from unswaged nut
Nut NOT SWAGED
Valve Opened
Pressurized Pipe
Step 3
it may be helpful to pre-measure and mark tubing to help in indicating when proper depth is reached
Carefully Push probe into pipe making sure it goes down so it just protrudes into pipe.
Only when probe is in proper position then swage nut.
Valve Opened
Pressurized Pipe
Step 4